


Two Wests Growing Pole

K6 (10)

<u>Components</u>		<u>Qty</u>
<u>Aluminium Tube</u>		
A,	34"	5
B,	24"	2
C,	9"	4
D,	1"	5
<u>Joints</u>		
3 way		4
6 way		1
Caps		5
Base Plate		1
Top Plate		1
Jubilee Clip		1
Nylon Twine		50m
Spikes		5

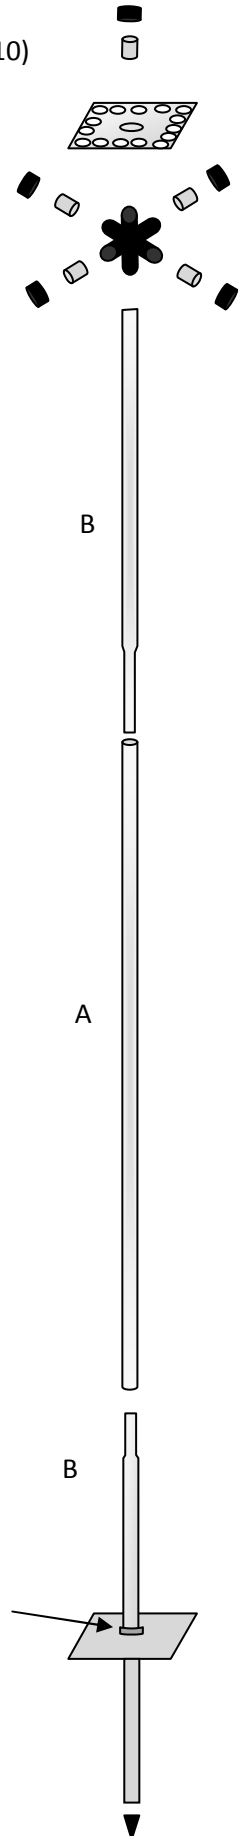


Assemble the pole and base frame as illustrated using a rubber or wooden mallet to knock the joints in fully.
 Push all four corner uprights of the base frame into the ground leaving approximately one inch to allow you to thread the twine under and around the horizontals.

Push the pole into the centre of the base frame to a depth of approximately 12".

Cut 24 x 82" pieces of twine, tie one end of the each twine off on the base frame and then the other to the top plate, Repeat this 23 times giving each side a maximum of six strings.

Push the base frame fully into the ground to fully tighten any slack in the strings.

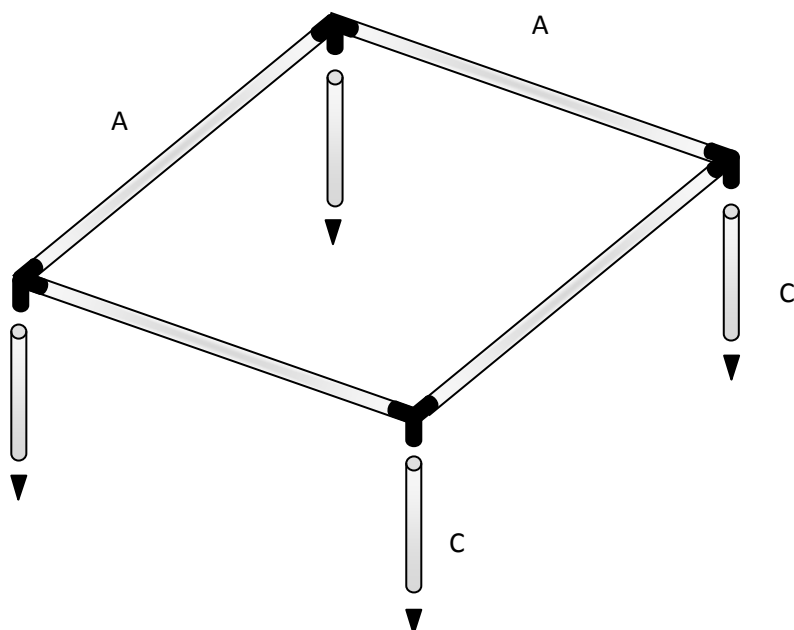

Jubilee Clip
 Approx' 12"