

Vertical Garden Tray Cloche

V3 (10)


Components

A. Side panels	x2
B. End Panels	x2
C. Top Panel	x1
D. Corner Braces	x4
E. Top Panel Retaining Clips	x4
F. Nuts & Bolts	16

Remove the protective film from all the panels.
Assemble the two side panels as shown in the diagram below.



Join the two side assemblies together using the End Panels

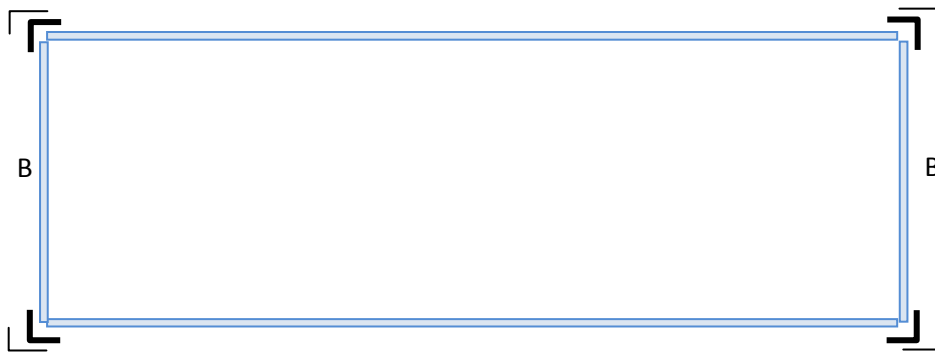

Once the main body is assembled sit this on top of the compost in the tray and push down firmly so that the corner braces and panels make a seal around the top. More compost can be added inside the cover if necessary.

Position the Top Panel so that the four cropped corners rest inside the four corner braces. Swing the retaining clips into position to hold the Top Panel in place.